 
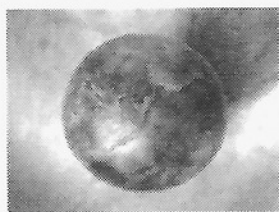 


# DIGITAL PHOTOKeychain

KEEP YOUR PRECIOUS MEMORIES AT YOUR FINGERTIPS!

---

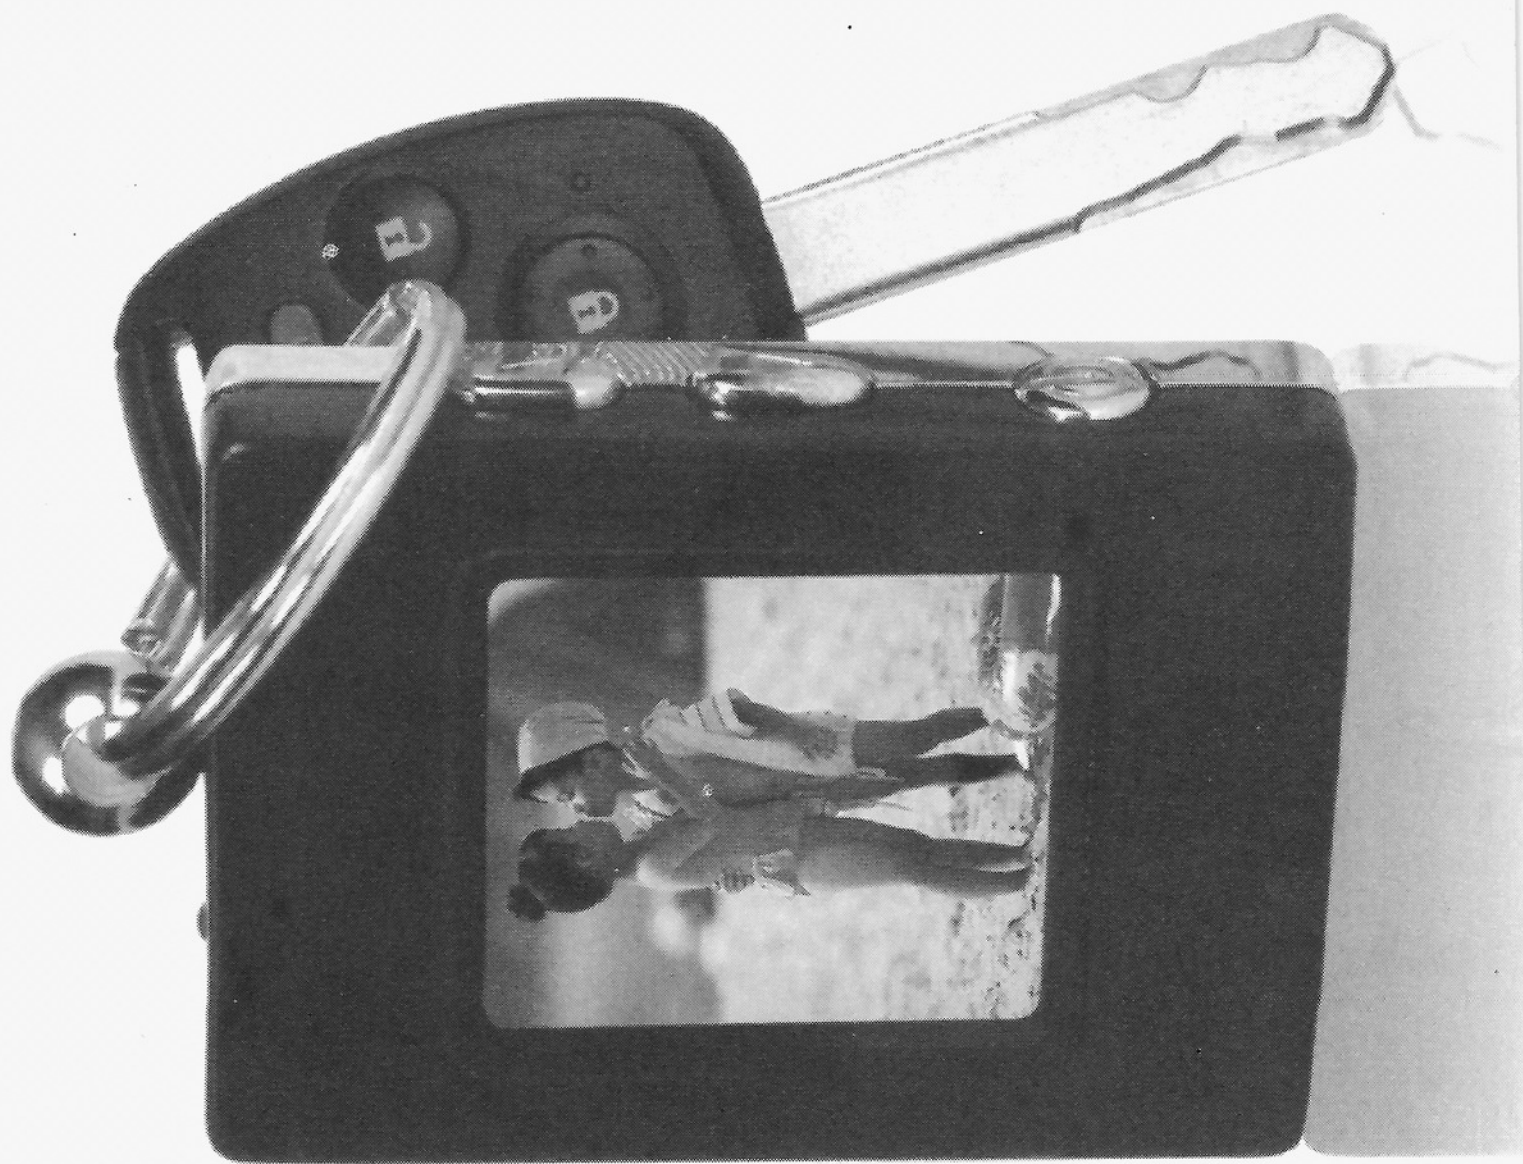

INNOVAGE™  
PRODUCTS

## PRODUCT OVERVIEW

Keep up to 60 of your precious memories at your fingertips with our Digital Photo Keychain. It's so simple to use. Photos download directly from your computer onto the keychain and are automatically resized to fit the ultra bright, high-resolution, 1.4" color LCD screen. The fully rechargeable internal battery provides up to 3 hours of viewing time.

## PRECAUTION

Please read the following instructions carefully for your safety and to prevent damage to the unit. Do not discard these instructions as they contain important information regarding the proper use and care of your device. For optimum performance, please fully charge the device before using. (see page 6.)

 
1. **DO NOT** expose to extreme temperatures.
2. **DO NOT** expose to moisture or get device wet.
3. **DO NOT** store in dusty areas.
4. **DO NOT** expose to harsh chemical cleaners.
5. **DO NOT** expose to direct sunlight or heat sources.
6. **DO NOT** try to disassemble or repair the device. No serviceable parts.
7. **DO NOT** exert excessive pressure on the device.
8. **DO NOT** place heavy objects on top of the device or drop the device.
9. **DO NOT** use near any appliance that generates a strong magnetic field.

### CAUTION

- 1) To reduce the risk of electric shock, do not remove cover. There are no serviceable parts inside.
- 2) To reduce the risk of fire and electric shock, do not expose this unit to rain or moisture.

**Environmental Information** Follow your local guidelines for waste disposal when discarding packages, batteries and electronic devices.

## LOCATION OF CONTROLS

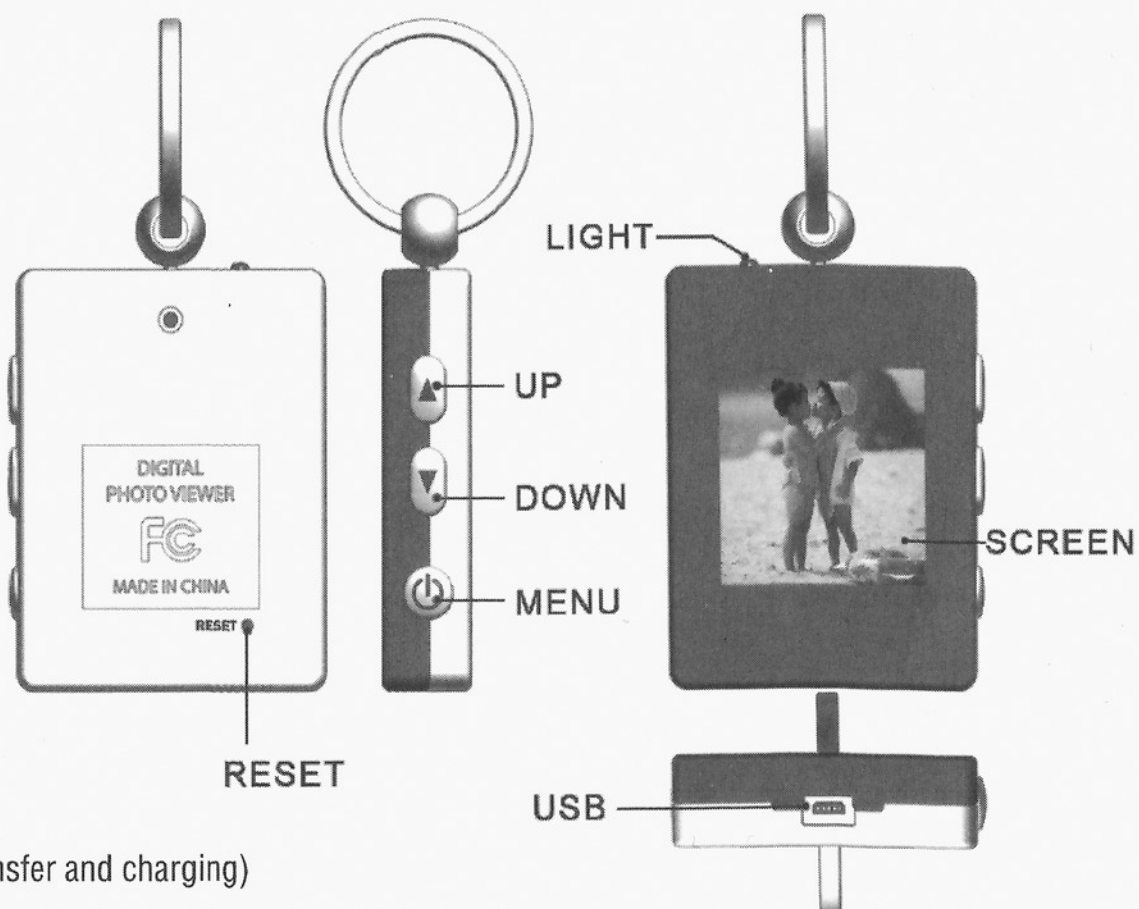

## ACCESSORIES

- USB Cable (transfer and charging)
- Software CD
- Optional AC Charging Adapter (not included)

## INSTALLING DRIVER SOFTWARE TO YOUR COMPUTER

 
**WARNING:** You must install driver software before connecting the Digital Photo Keychain to your computer. Otherwise, it may suffer permanent damage. Installing the driver software allows you to download photos from your PC or MAC onto the Digital Photo Keychain. When installing the driver software, close any open programs and ensure virus software is disabled. After installation, restart your computer before downloading photos.

**NOTE:** The Digital Photo Keychain should not be connected to your computer before or during the driver software installation.

### WINDOWS:

1. Insert the driver software CD into your computer's CD-ROM drive.
2. Your system might recognize the software automatically, if not, go to "My Computer" on your computer's desktop and open the CD-ROM drive icon.
3. Run the SETUP.EXE file and follow the onscreen instructions.
4. Remove the driver software CD from your computer's CD-ROM drive.
5. Restart your computer.


### Windows

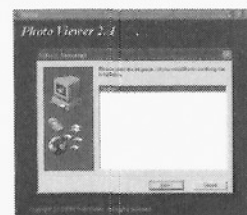

### MAC:

 
1. Insert the driver software CD into your computer's CD-ROM drive.
2. Run the Photo Viewer Install.pkg file and follow the onscreen instructions.
3. Remove the driver software CD from your computer's CD-ROM drive.
4. Restart your computer.

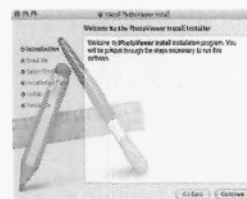

### Mac





Connect the Digital Photo Keychain to your computer using the USB cable included. Each time you connect the USB cable, the menu will be displayed on the Digital Photo Keychain's screen. Press ▲ or ▼, to select the USB Charge mode or the USB Update mode. (NOTE: Select the USB Charge mode and allow the Digital Photo Keychain to fully charge (3 hours) before downloading any photos.

 
## BASIC OPERATIONS

**POWER ON:** Press and hold  [MENU] for 3 seconds to power on unit to photo viewer mode.

**POWER OFF:** Press and release  [MENU]. Main menu is accessed. Press and release  to select power off.

**AUTO POWER OFF:** When device remains idle, it conserves battery power by automatically dimming the screen after 6 seconds and will power off after 3 minutes.


**TIME DISPLAY MODE:** Press and hold  or  for 2 seconds to display YEAR-MONTH-DAY-HOUR-MINUTE-SECOND-DAY OF THE WEEK.

**LOW BATTERY:** When the battery is low, the screen will display “  ”

**CHARGE BATTERY:** Connect USB cable to photo viewer and then connect USB cable to computer USB port. The battery indicator light on the photo viewer will illuminate red and change to green when fully charged (approx. 3 hours).

**RESET:** If photo viewer malfunctions, press the RESET button located on the back of the photo viewer.

## TO ACCESS MENU FUNCTIONS

- MAIN MENU ACCESS: Press  [MENU] button.

## TO SELECT MENU FUNCTIONS



- **SELECT MENU ITEM**

Press ▲ or ▼ to move arrow.

- **POWER OFF**

Unit will immediately turn off to conserve power, or press and release  [MENU] to power off.


- **DELETE IMAGE**

You can delete the currently displayed image. When an image is displayed, press the  button and select 'Delete Image'. The message 'Delete?' is displayed. Press the  button to confirm deleting the image; otherwise, press the ▲ / ▼ button or no button at all, and it will not delete the image and will return to the photo viewer mode.

- **DISPLAY MODE**

Press ▲ or ▼ to move arrow. Select AUTO SLIDE to set slideshow seconds between photos. Select MANUAL SLIDE to cancel AUTO SLIDE function.

- **CLOCK SETTING**

You can set the year, month, day, hour, minute and second manually. Use the ▲ / ▼ button to select each item, and then press the  [MENU] button to complete the setting. The week displayed is automatically adjusted based on the time setting.

 
- **CLOCK DISPLAY**

Press ▲ or ▼ to switch to 12/24H.

- **EXIT**

Press  [MENU] to exit menu functions.



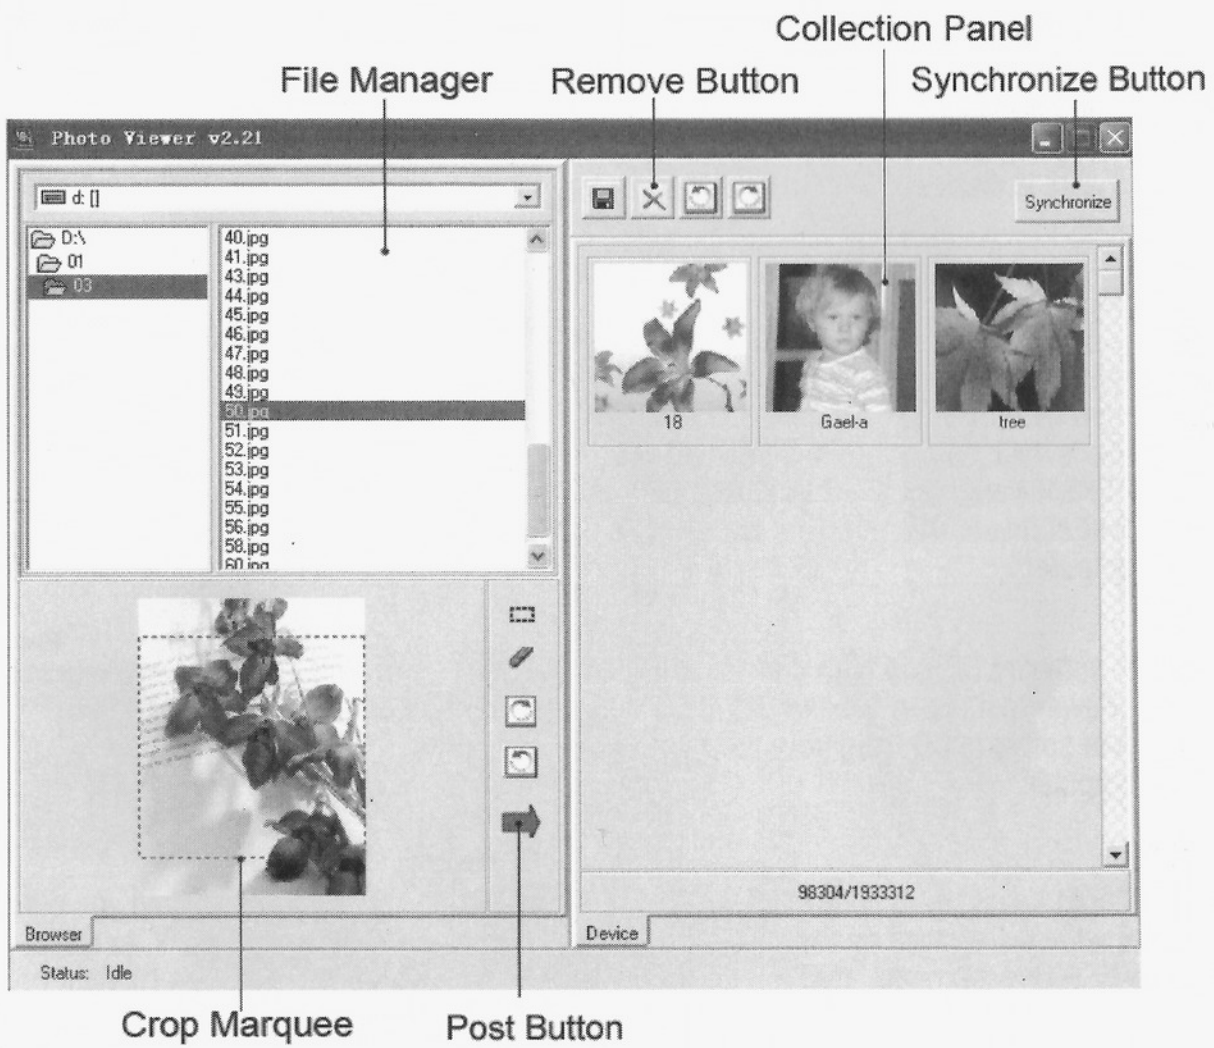

## DOWNLOADING PHOTOS USING THE PHOTO VIEWER SOFTWARE

1. Connect the USB cable to your computer and Digital Photo Keychain. Press ▼ down to access the USB update mode on the Digital Photo Keychain and press the menu/power button ⏻. Your keychain will now say, "updating" and you are ready to open the software on your computer. (Please note the keychain will continue to say "updating" the entire time that you are working with the program on your computer and will change only when you safely disconnect it from the computer.)

**IMPORTANT:** The keychain MUST be plugged in and in "update" mode in order for you to open the Photo Viewer program. If it is not plugged in, or is in the wrong mode, you will get the following error: No photo viewer is found, program terminated!

2. Once the keychain is plugged in and in "update" mode double click the Photo Viewer icon on your desktop to launch the application.
3. Use Photo Viewer's file manager to browse photos on your computer.
4. Once you select a photo, it will show up in the crop marquee. Put the box over the area that you want to see on your keychain and click the POST button ➡. This will move your photos to the collection panel.
5. Delete any unwanted photos by selecting the image in the collection panel and clicking the X button from the menu bar.
6. Once you have all photos in the collection panel that you want on your keychain, click the "synchronize" button. At the bottom of your screen, you will see that the status has changed from "idle" to "download" and the black bar will show % complete.
7. Once the download is 100% complete and you get the following message, "photo viewer data synchronize complete", click OK, exit the program and disconnect the keychain.

**IMPORTANT:** Do not disconnect the Digital Photo Keychain until the download is complete and you exit the photo viewer software.

### ADDITIONAL NOTES:

1. Please note that when charging from your USB cable to the computer, full charging time will take up 7 hours. If you are charging using your own DC car charger or AC wall adaptor, charging time will be much less and will take up to 3 hours.
2. Indicator light will turn green when charging is complete.

For Technical Support, Please Visit [www.msccustomer care.com](http://www.msccustomer care.com) or Call 1-800-374-2744



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2007 Innovage LLC All rights reserved. • Printed in China

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.